

3.1 Packing transport

Before using the machine, check that there are no broken, worn or damaged parts; in such case proceed to a prompt substitution. For the substitution of parts and accessories, carefully follow the instructions contained in this manual.



3.2 Electric supply

The “BERTAADV” electrosponge shall be supplied with the tension equal to the value indicated in the “TECHNICAL DATA” label; connect the machine only to a line featuring an efficient ground cable. In case of doubts, do not connect the machine. Connect the machine only to a 16A plug.



IF THE MACHINE IS CONNECTED TO THE MAINS BY MEANS OF A PATCH CORD, THIS SHALL HAVE THE FOLLOWING CHARACTERISTICS:

- 1. MAXIMUM LENGTH 10 METERS (33');**
- 2. HAVING A SECTION SUITABLE FOR THE LOAD;**
- 3. BEING COMPLETELY UNCOILED.**

The “BERTAADV” electrosponge must be connected to a power mains equipped with differential switch or insulation transformer of class II and matching the technical regulations of the destination country.




FOR THE CORRECT USE OF THE RESIDUAL CURRENT CIRCUIT BREAKERS, DO NOT FORGET TO CHECK THEIR EFFICIENCY BY MEANS OF THE TEST BUTTON PLACED ON THE FRONT PART OF THE DEVICE ITSELF.

3.3 Machine assembly



TO CARRY OUT THIS OPERATION, WEAR THE PROTECTIVE GLOVES AND ACCIDENT-PREVENTION SHOES.

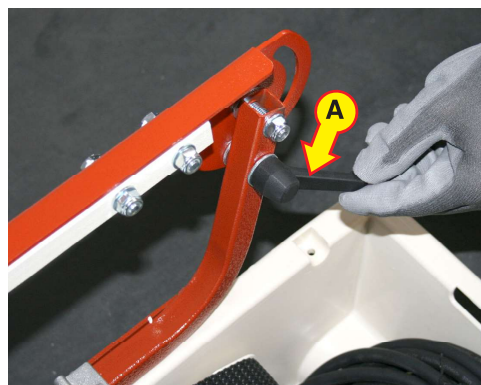

Loosen the knobs (A), lift up the handle (B) and tilt it in the desired position, tighten the knobs (A).