


Stage 1

Measure the DeltaBath panel and cut to the required size.



Stage 2

Insert panel under bath edge and level.

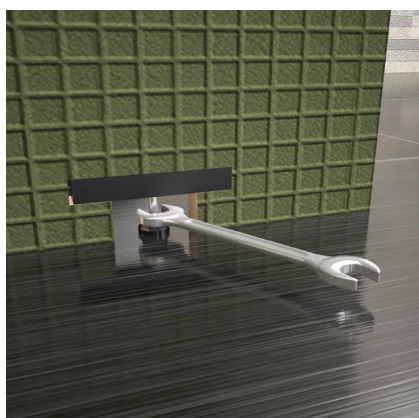

Stage 3

Adjust the feet to the required height using a 15mm spanner.



Stage 4

(If fitting an end panel) Apply a bead of DeltaSeal to the end panel and position the side panel.




Stage 5

Secure the DeltaBath Panels using the PCS screws and washers provided.



Stage 6

Apply DeltaTape to the board edges.

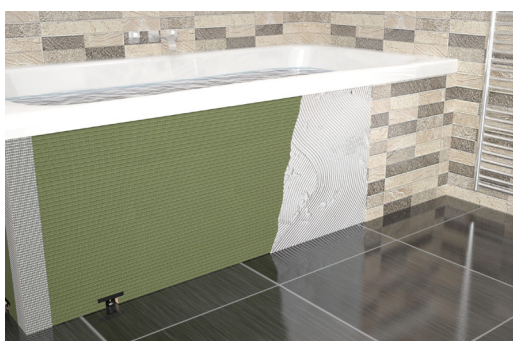

**Your DeltaBath
Panel is now
ready to tile.**